




EN

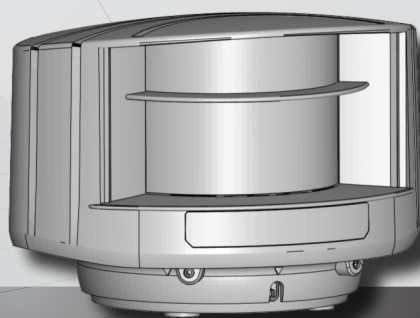

## LZR<sup>®</sup>-I100/ -I110


LASER SCANNERS FOR INDUSTRIAL DOORS

I100: max. detection range of 9.9 m x 9.9 m

I110: max. detection range of 5.0 m x 5.0 m

User's Guide for software version 0600 and higher

## SAFETY

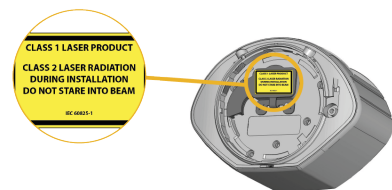


The device emits invisible (IR) and visible laser radiations.  
 IR laser: wavelength 905nm; output power <0.10mW (Class 1 according to IEC 60825-1)  
 Visible laser: wavelength 635nm; output power <1mW (Class 2 according to IEC 60825-1)

The visible laser beams are inactive during normal functioning.  
 The installer can activate the visible lasers if needed.  
 Do not stare into the visible red laser beams.




### CAUTION!

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

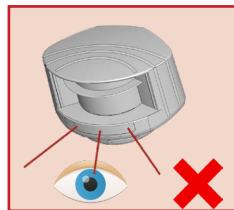


Do not stare into the visible red laser beams.

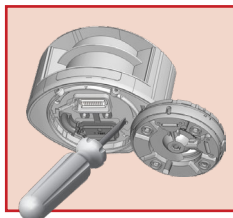

The warranty is void if unauthorized repairs are made or attempted by unauthorized personnel.




Only trained and qualified personnel may install and adjust the sensor.

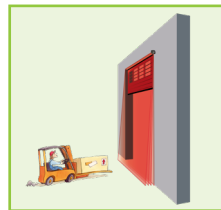


Test the good functioning of the installation before leaving the premises.

The manufacturer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety. Other use of the device is outside the permitted purpose and can not be guaranteed by the manufacturer. The manufacturer cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.


## INSTALLATION AND MAINTENANCE

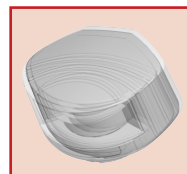


Avoid extreme vibrations.

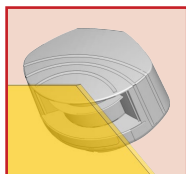


Do not cover the front screens.

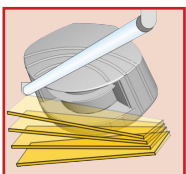


Avoid moving objects and light sources in the detection field.

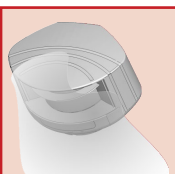

Avoid the presence of smoke and fog in the detection field.

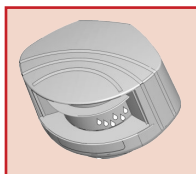

Avoid condensation.

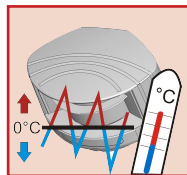


Avoid exposure to sudden and extreme temperature changes.




Avoid direct exposure to high pressure cleaning.



Do not use aggressive products to clean the front screens.

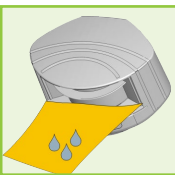


Wipe the front screens regularly with a clean and damp cloth.

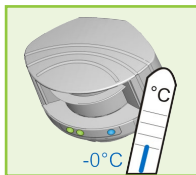


Keep the sensor permanently powered in environments where the temperature can descend below -10°C.

DESCRIPTION

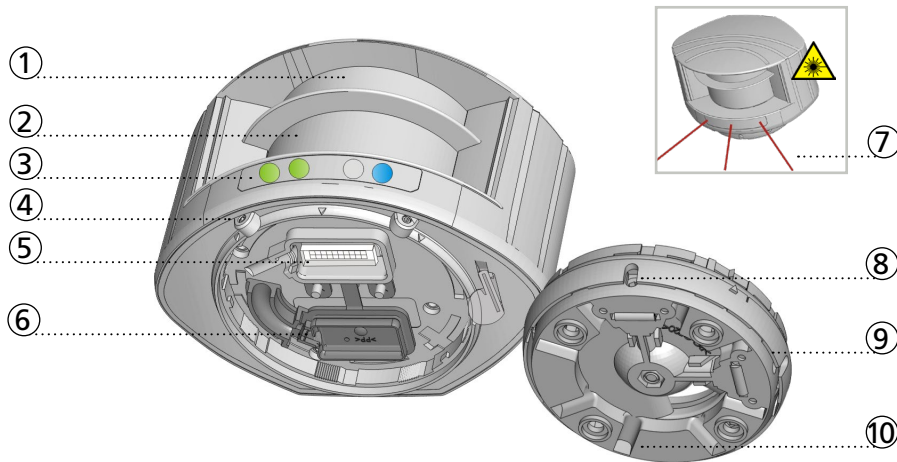


- |                                 |  |
|---------------------------------|--|
| 1. laser sweep emission         | 6. protection cover                      |
| 2. laser sweep reception        | 7. visible laser beams (3)               |
| 3. LED-signals (4)              | 8. notches for tilt angle adjustment (2) |
| 4. screws for position lock (2) | 9. adjustable bracket                    |
| 5. connector                    | 10. cable conduits (4)                   |

LED-SIGNAL




- 1. Detection LED: relay 1 - optional field
- 2. Detection LED: relay 2 - safety field
- 3. Error LED
- 4. Power LED



DETECTION LEDs

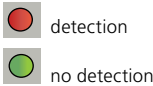


ERROR LED



POWER LED

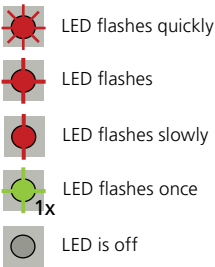

All 4 LEDs can be switched off and on again by remote control.  
This can be useful in cases where the sensor should not draw any attention.



SYMBOLS



Caution!  
Laser radiation



Remote control  
sequence



Possible  
remote control  
adjustments



Factory  
values



Attention!  
Important!



Tip  
Info

HOW TO USE THE REMOTE CONTROL



30 minutes after last use, the sensor locks the access to the remote control session.  
Cut and restore power supply. The remote control session is accessible again during 30 minutes.



After unlocking, the red LED flashes and the sensor can be adjusted by remote control.




If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.




To end an adjustment session, always lock the sensor.

ADJUSTING ONE OR MORE PARAMETERS



CHECKING A VALUE




X = number of flashes = value of the parameter

4x 1x 2x = field width: 4.2 m


3x = field width is defined by teach-in

RESTORING TO FACTORY VALUES




SAVING AN ACCESS CODE

The access code is recommended for sensors installed close to each other.





DELETING AN ACCESS CODE




Enter the existing code


## 1 MOUNTING

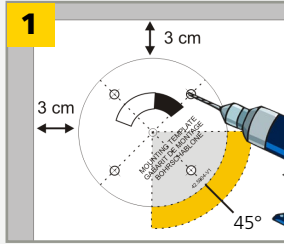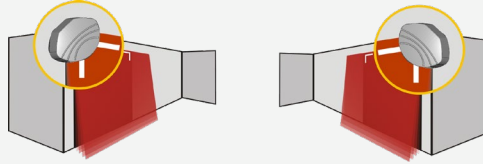


Use the mounting template to position the sensor correctly. The grey area indicates the detection range. Drill 4 holes and make a hole for the cable if possible.

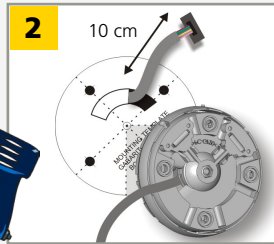


Pass the cable +/- 10 cm through the cable opening. If drilling an opening is not possible, use the cable conduits on the back side of the bracket.

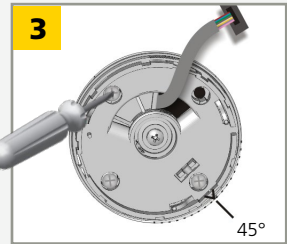


Position the bracket and fasten the 4 screws firmly in order to avoid vibrations.

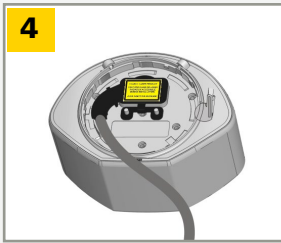

Open the protection cover, plug the connector and position the cable in the slit. Close the protection cover and fasten it firmly.

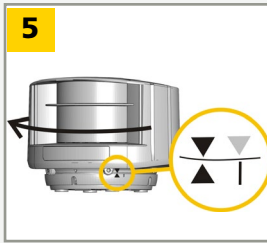


Position the housing on the bracket and turn the sensor until the two triangles are face to face.

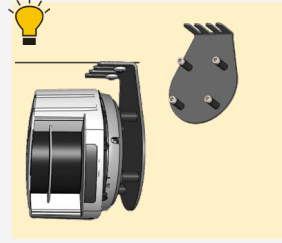

Use the LBA accessory if needed.

## 2 WIRING

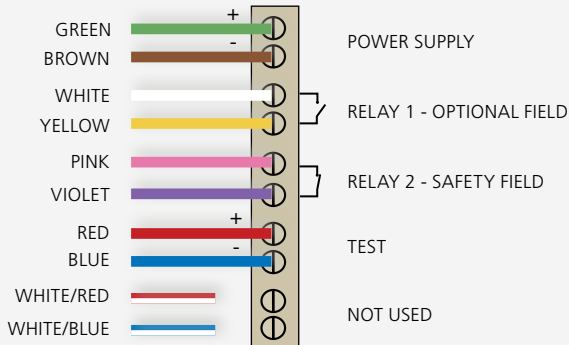

Use the Power Supply Module (24V DC, 0.75 A) if needed.



The sensor tests both relays.



Door control without test: connect red and blue wires to power supply (with polarity)

CAT2 Pld

### 3 POSITIONING




Unlock the sensor and activate the visible laser beams in order to position the curtains parallel to the door.


The visible laser beams stay activated for 15 minutes or can be turned off by the same sequence.



Adjust the **lateral position** of the detection field.

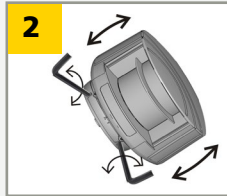


Adjust the **tilt angle** of the detection field with the hex key.

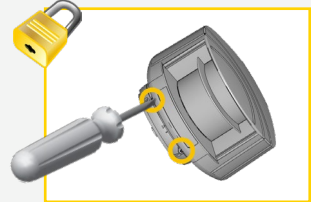


**Lock the position** of the mounting bracket to avoid malfunctioning in case of extreme vibrations.




The distances between the curtains depend on the mounting height and side.

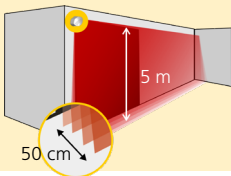

The visible laser beams indicate approximately the position of curtain C1.

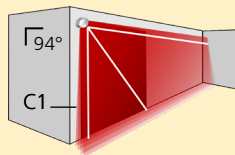

The distance between the inner curtains of the 2 sensors must be max. 20 cm to ensure safety according to EN12453.




### 4 MOUNTING SIDE

Check and select the corresponding mounting side if necessary.




Stay outside of the detection field to avoid disturbances.



	«□»	1	2	CAT2 PI d	3	4	5	CAT2 PI d
		left	right		left	right	centre	
		<b>WITH BACKGROUND</b> The sensor memorizes the floor as reference point and signals a fault when its orientation is changed.			<b>WITHOUT BACKGROUND</b> No reference point, no signal.			

A teach-in is launched, the sensor learns its environment and automatically determines the detection field(s). Both RED LEDs flash slowly and the 3 visible laser beams automatically light up during 30 seconds.



After setting the mounting side, the safety and the optional field have the same dimensions.



## 5 SAFETY FIELD CONFIGURATION (RELAY 2)

### SAFETY FIELD TEACH-IN

Launch a teach-in after changing the sensor position or when new objects are added to or changed in the detection zone.




During teach-in, the detection field should be free of snow buildups, heavy rain, snowfall, fog or other moving objects.

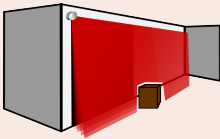

During teach-in, the sensor learns its surroundings and adapts the detection field shape to these. Objects in the detection field will be cut out.

### FIELD DIMENSIONS

After the teach-in, the field dimensions can be reduced by remote control.

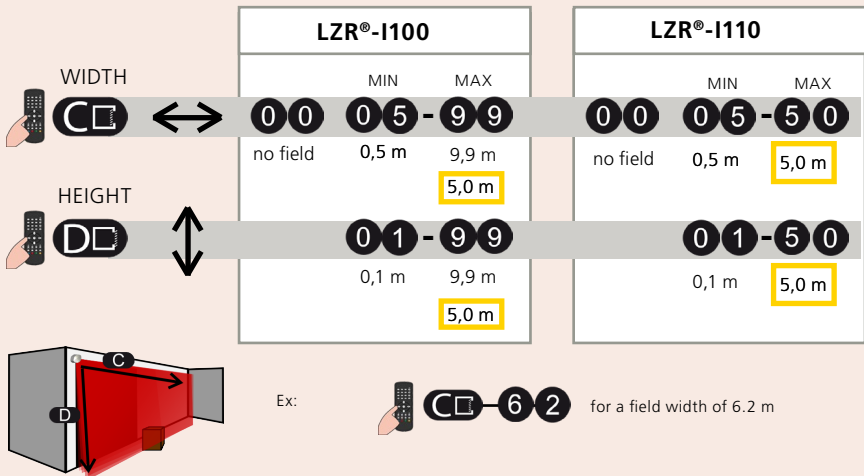

The field is by default limited to 5 x 5 m. You can adapt the dimensions by remote control, but they can never be bigger than the shape which was defined by the teach-in.



FACTORY VALUES








OTHER REMOTE CONTROL CONFIGURATIONS

ACTIVE DETECTION CURTAINS

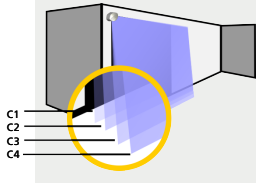

CURTAIN C1 C2 C3 C4

- 0 curtain is inactive on both fields
- 1 curtain is active on optional field
- 2 curtain is active on safety field
- 9 curtain is active on both fields



Ex: C1 + C2 are active on safety field  
C3 + C4 are active on optional field



C1 is active on both fields  
C2+C3 are active on safety field  
C4 is inactive



All curtains are active on both fields

The distances between the curtains depend on the mounting height and side. When mounted on the left, the distance between curtain C1 and curtain C4 is approximately 10 cm for every meter (mounting height). **Example:** at 5 m the distance between C1 and C4 is 50 cm.

IMMUNITY FILTER

Recommended for Gates applications

FOR CRITICAL ENVIRONMENTS (RAIN SNOW, FOG)

indoor	outdoor low	outdoor med	outdoor high
1	2	3	4

LZR®-I100 max.


Recommended for industrial doors applications

FOR CRITICAL OBJECTS (DARK OBJECTS)

indoor	outdoor low	outdoor med	outdoor high
5	6	7	8

LZR®-I110 max.

UNCOVERED ZONE

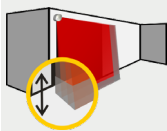

F2

0	1	2	3	4
5	10	15	20	25

cm

Increase in case of snow, dead leaves, etc.

MIN. OBJECT SIZE (approximate values)

0	1	2	3	4
off	5	10	15	20

cm

OUTPUT ACTIVATION DELAY (approximate values)

0	1	2	3	4	5	6	7	8	9
off	100	200	300	400	500	600	700	800	900

ms


The relays are triggered when the detection duration ≥ the selected time.

DETECTION FIELD REDIRECTION

F1

0	1
optional	optional or safety
safety	safety

OUTPUT CONFIGURATION



	1	2	3	4
R1	A - NO	P - NC	P - NC	A - NO
R2	P - NC	A - NO	P - NC	A - NO

A = active  
P = passive  
NO = normally open  
NC = normally closed

R = RELAY OUTPUT



## TROUBLESHOOTING

	No blue LED	There is no power.	<b>1</b> Check cable and connexion.
		The polarity of the power supply is inverted.	<b>1</b> Check the polarity of the power supply.
		All LEDs have been deactivated by remote control.	<b>1</b> Activate the LEDs by remote control.
	Only the blue LED is on.	The test input is not connected.	<b>1</b> Check wiring. The RED and BLUE cable have to be connected to the test input or the power supply.
		The detection field is too small or deactivated.	<b>1</b> Check the size of the fields. <b>2</b> Launch a teach-in.
	The detection LED remains green.	The object size is too small.	<b>1</b> Decrease the min. object size.
		Someone or something is in the detection field.	<b>1</b> Step out of the field and/or remove the any object(s) from the field.
	The detection LED remains red.	The field is touching the floor, the wall or the door, which leads to detection.	<b>1</b> Activate the 3 red beams and check if the position of the sensor is correct. If not, adjust the hex screws. <b>2</b> Verify the field size. <b>3</b> Launch a teach-in.
		No background (reference point) is found.	<b>1</b> Check the position of the sensor. <b>2</b> Check the mounting side setting. If there is no background, set the mounting side to value 3 to 5. <b>3</b> Launch a new teach-in.
		The sensor is masked.	<b>1</b> Verify and clean the front screens with a damp cloth.
 	The orange LED is flashing and the detection LEDs are red.	The power supply voltage is exceeding the acceptable limits.	<b>1</b> Check the power supply voltage.
		The sensor exceeds its temperature limits.	<b>1</b> Verify the outside temperature where the sensor is installed. Eventually protect the sensor from sunlight using a cover.
		Internal error	<b>1</b> Wait a few seconds. If the LED remains ON, reset the power supply. If the LED turns on again, replace the sensor.
	The orange LED is on.	30 minutes after last use of the remote control, the sensor locks the access to the remote control session.	<b>1</b> Cut and restore power supply. The remote control session is accessible again during 30 minutes.
		The batteries in the remote control are not installed properly or dead.	<b>1</b> Verify or replace the batteries.
		The remote control is badly pointed.	<b>1</b> Point the remote control towards the sensor, but with a slight angle. The RC should not be pointed in a right angle in front of the sensor.
		A reflective object is in close proximity to the sensor.	<b>1</b> Avoid highly reflective material in proximity to the sensor.
	The sensor does not respond to the remote control.	You have to enter an access code or the wrong code was entered.	<b>1</b> Cut and restore power supply. No code is required to unlock during the first minute after powering.
	The sensor does not unlock.		

## TECHNICAL SPECIFICATIONS

Technology:	laser scanner, time-of-flight measurement
Detection mode:	motion and presence (EN 12453 level E)
Max. detection range:	LZR®-I100: 9.9 m x 9.9 m; LZR®-I110: 5.0 m x 5.0 m
Uncovered zone:	5 - 25 cm (adjustable)
Remission factor:	> 2 %
Angular resolution:	0,3516 °
Min. detected object size (typ.): (in proportion to object distance)	LZR®-I100: 2,1 cm @ 3 m ; 3,5 cm @ 5 m ; 7 cm @ 10 m LZR®-I110: 2,1 cm @ 3 m ; 3,5 cm @ 5 m
Testbody:	700 mm x 300 mm x 200 mm (testbody A according to EN 12453)
Emission characteristics:	(IEC/EN 60825-1)
IR laser:	wavelength 905 nm; output power <0.10 mW (CLASS 1)
Red visible laser:	wavelength 635 nm; output power <1 mW (CLASS 2)
Supply voltage:	10-35 V DC @ sensor side (to be operated from SELV compatible power supplies only)
Power consumption:	< 5 W
Peak current at power-on:	1.8 A (max. 80 ms @ 35 V)
Cable length:	10 m
Response time:	typ. 20 ms; max. 80 ms (+ output activation delay)
Output:	1 electronic relay (galvanic isolated - polarity free)
Max. switching voltage:	35 V DC / 24 V AC
Max. switching current:	80 mA (resistive)
Switching time:	t <sub>ON</sub> =5 ms; t <sub>OFF</sub> =5 ms
Output resistance:	typ 30 Ω
Voltage drop on output:	< 0.7 V @ 20 mA
Leakage current:	< 10 µA
Input:	2 optocouplers (galvanic isolated - polarity free)
Max. contact voltage:	35 V DC (over-voltage protected)
Voltage threshold:	Log. H: >8 V DC; Log. L: <3 V DC
Response time monitoring input:	< 5 ms
LED-signal:	1 blue LED: power-on status 1 orange LED: error status 2 bi-coloured LEDs: detection/output status (green: no detection; red: detection)
Dimensions:	125 mm (D) x 93 mm (W) x 70 mm (H) (mounting bracket + 14 mm)
Material:	PC/ASA
Colour:	black or white
Mounting angles on bracket:	-45 °, 0 °, 45 °
Rotation angles on bracket:	-5 ° to +5 ° (lockable)
Tilt angles on bracket:	-3 ° to +3 °
Protection degree:	IP65
Temperature range:	-30 °C to +60 °C if powered; -10 °C to +60 °C unpowered
Humidity:	0-95 % non-condensing
Vibrations:	< 2 G
Pollution on front screens:	max. 30 %; homogenous
Conformity:	EN 12453 level E; EN 12978; EN ISO 13849-1 CAT2, PL "d"; IEC/EN 60825-1; IEC/EN 61496-1; IEC/EN 61496-3 ESPE Type 2; IEC/EN 62061 SIL 2



BEA hereby declares that the LZR®-I100/-I110 is in conformity with the European directives 2011/65/EU, 2014/30/EU and 2006/42/EC.

Notified Body for EC inspection: 0044 - TÜV NORD CERT GmbH, Langemarckstr. 20, 45141 D-Essen

EC-type examination certificate number: 44 205 13089629

Estelle Graas, Angleur, March 2019

The complete declaration of conformity is available on our website

This product should be disposed of separately from unsorted municipal waste

